



Multi-Shot .177 / .22 Magazine System for BSA Ultra Air Rifles.

Thank you for your purchase. Please read these fitting instructions before attempting to install the magazine system.

Your kit should contain -

- 1 off Magazine
- 1 off Bracket
- 1 off 3mm allen key

Safety first!

Observe safe practices when handling you rifle. It is highly recommended to follow the rifle manufacturers safety instructions when working on your rifle. Check the rifle is not loaded and is de-cocked when setting up the magazine on your rifle. The magazine and bracket contain strong magnets Do not place them near magnetic media such as credit cards & floppy discs or any other magnetically sensitive devices. People with pacemakers should seek medical advice before using this product.

www.rowanengineering.com

Installation.

1. It may be necessary to move your front scope mount forward on the dovetail rail to accommodate the magazine bracket.
2. It may be necessary to carefully trim the very corner of the plastic breech insert back to a square corner to allow the magazine to slide across the breech smoothly.
3. Carefully slide the magazine bracket on to the dovetail rail. Do not tighten the Allen screw yet.
4. Slide in the magazine from the left hand side of the rifle. (Or the right side for right side fitting) It will be necessary to pull back the bolt, but not so far as to 'cock' the gun.
5. Adjust the position of the bracket on the dovetail so that it does not cause the magazine to bind when inserting / removing.
6. Using the 3mm allen key gently tighten the allen cap screw sufficient only to secure the bracket. Damage to the bracket or your rifle will result if too much force is applied.

bottom cut-out.

Photo 2

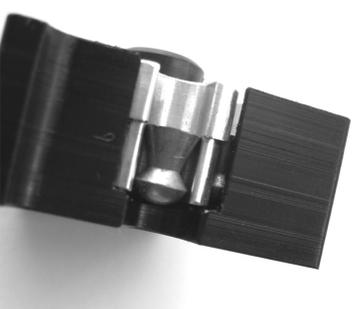


Photo 3
Indexing.
Right side fitting
magazine shown.



7. Take your rifle to a safe area for test shooting.
8. Take the magazine and load it using the open bottom slot with suitable pellets – Air Arms Fields are a good choice. See photo #1 (.177 magazine shown.)
Continue until the slots are loaded. Leave the last slot empty. See photo #2

9. Withdraw the bolt and slide the magazine in to position. The magnet will click and hold it in place.
10. Pull the cocking bolt fully back.

11. Using an upward motion with the thumb, index the magazine and allow a pellet to drop in to the breech pellet groove. See photo#3
12. Push the bolt forward and lock in to position.
13. Your multi-shot rifle is ready to shoot.

Photo 1

Loading pellets in to

www.rowanengineering.com